

Operation Instructions

Time Cue

AMU9914-09A

This recording alarm clock lets you record and playback voice to use as your wake-up or reminder alarm. The clock uses state-of-the-art IC recording technology without tape to give superb sound reproduction.

SETTING THE TIME

1. Slide **TIME/RUN/CUE** to **TIME**.
2. Repeatedly press **HOUR** to set the current hour. For quick advance, press and hold down **HOUR**.
3. Repeatedly press minute to set the current time. For quick advance, press and hold down **MINUTE**.
4. Slide **TIME/RUN/CUE** to **RUN**.

SETTING THE ALARM

You can use the clock as a wake-up or reminder alarm by setting it to play back the recording at the present time.

1. Slide **TIME/RUN/CUE** to **CUE**, the present alarm time and **AL** appear on the LCD.
2. Repeatedly press **HOUR** and **MINUTE** to set the alarm time. For quick advance, press and hold down **HOUR** or **MINUTE**.
3. Slide **TIME/RUN/CUE** to **RUN**.
4. Slide **OFF/TALK/ALARM** to **ALARM** if you want the alarm as the alarm sound. Slide **OFF/TALK/ALARM** to **TALK** if you want the recorded message as the alarm sound. The alarm icon appears on the LCD display.
5. When the alarm is turned on, if you selected the alarm as the alarm sound, the alarm sounds for one minute, and then turns off. If you selected the recorded message as the alarm sound, the clock plays back the recorded message one time.
6. To turn off the alarm completely, slide **OFF/TALK/ALARM** to **OFF**, the alarm icon will disappear from the LCD display.
7. You can view the alarm time by pressing either **HOUR** or **MINUTE** while **TIME/RUN/CUE** is at the **RUN** position.

RECORDING A MESSAGE

1. Press and hold down **REC** to begin recording. The red LED indicator lights, and the clock records for as long as you hold the button down. The red led indicator turns off when the memory is used up (up to 10 seconds of recording time).
2. Speak into the microphone from approximately 3 inches (7.6 cm) away.
3. Release **REC** to stop recording.

4. To record a new message, repeat step 1 to step 3. The new message replaces the old one.

PLAYING THE MESSAGE

Press **PLAY** to listen to the message.

REPLACING THE BATTERIES

This recording clock uses 4 AG 13 Batteries (included) for power. When the recorded sound, sounds weaken, distorted or the display dims, replace the batteries. The Time Cue keeps the message stored even if it loses battery power. Follow these steps to replace the batteries.

1. Slide open and remove the back case, then slide off the battery compartment cover.
2. Remove the old batteries, then install four fresh batteries in the compartment with their positive (+) side up.
3. Replace the battery compartment cover and back case.

Notes

- ⌚ Use only fresh batteries of the recommended size and type
- ⌚ Technical support, if needed, is available at Attainment Company, Inc.
Phone # 800-327-4269 or
International # 608-845-7880